

CORIDIUM

SuperPRO-PRO+

Bat
+
-
GND

U3

RESET

7V


5V
GND

ANALOG

2 3 4 5 *6 *7



To operate the SuperPro while the dongle is plugged in, but not attached to the PC, Jump J16 on the SuperPro, then cut the +5volt lead
HERE, and jumper over the diodes.....HERE

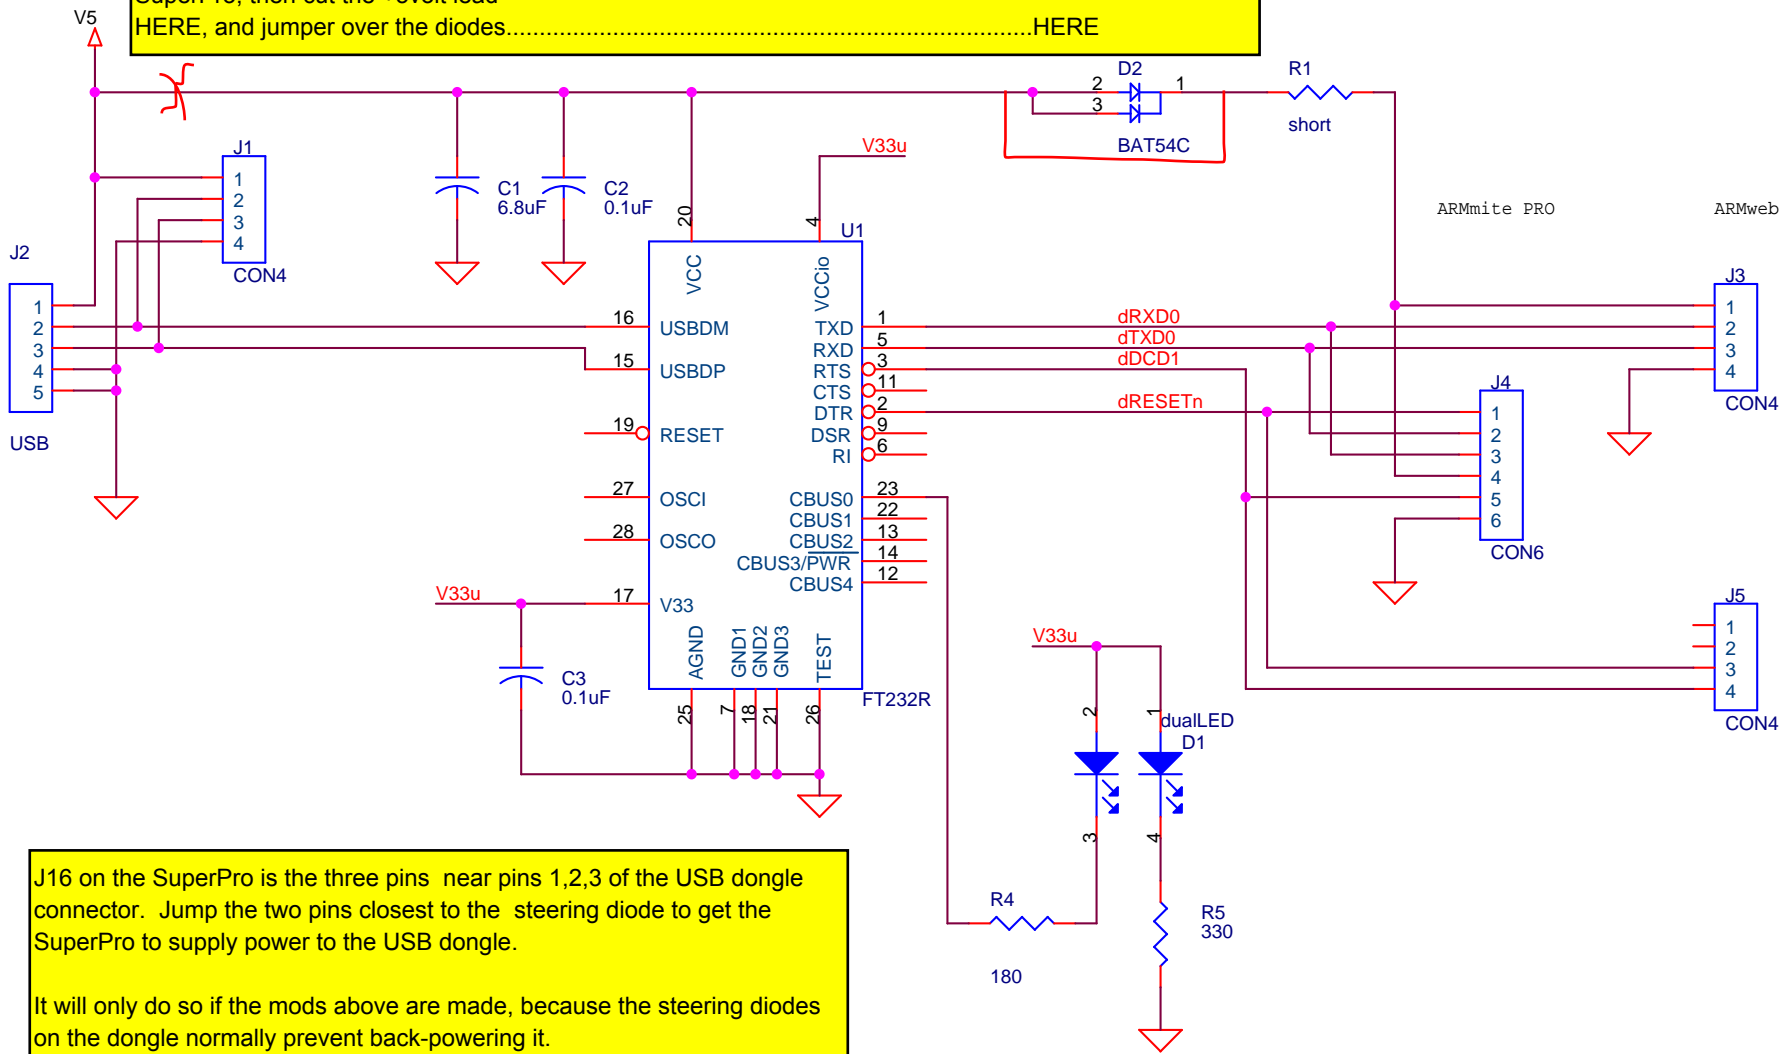

J16 on the SuperPro is the three pins near pins 1,2,3 of the USB dongle connector. Jump the two pins closest to the steering diode to get the SuperPro to supply power to the USB dongle.
It will only do so if the mods above are made, because the steering diodes on the dongle normally prevent back-powering it.



Title		
USB dongle		
Size	Document Number	Rev
A	{Doc}	2
Date:	Wednesday, February 11, 2009	Sheet 1 of 1